REAM & HAAGER LABORATORY INC.

179 W. BROADWAY ST.

DOVER, OHIO 44622

PHONE: (330) 343-3711 FAX: (330) 343-9858


HOW TO DISINFECT A WATER WELL BY-PASS ALL WATER CONDITIONING EQUIPMENT


Remove the well cap or the vent pipe or plug if the well is equipped with a sanitary well seal.





Connect a hose to a house spigot and run water directly into the well until chlorine odor is present in the water. Run the water this way for 15 minutes.



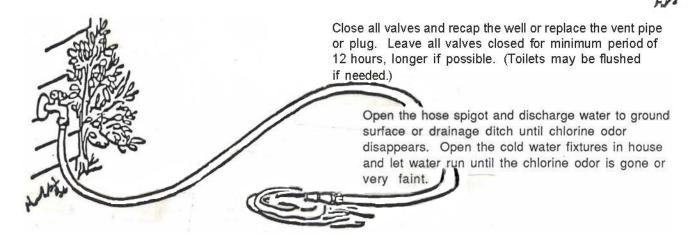

The well should now be properly disinfected. You may want to collect another sample of your water before using it.

